

# Flush Wood Plus Cypress Face Installation

(95600565)

## Installation Notes

Before installing, make sure to install the one-piece panel, and disconnect the power cords making sure the Molex connector and two wires are routed in front of the insert.

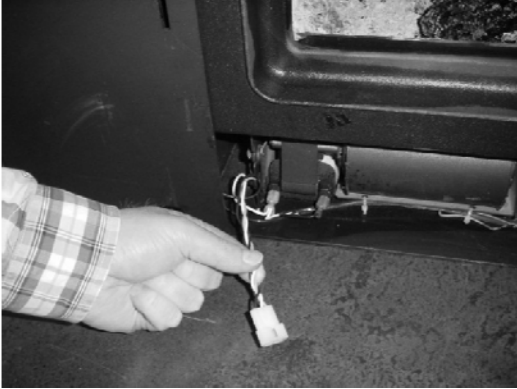


Figure 1: Molex connector



Figure 2: Two wires

This face and panel set extends the insert 19" into the fireplace (this is 1-1/4" more than the Flush Wood Arched).

## Compatibility

- Flush Wood Plus Insert Rectangle with 1-Piece Panel

## Packing List

- Upper Face, Lower Face, Left & Right Face
- Extension Rods (2)
- (5) Lock-Ties
- (4) Nuts
- Bypass Rod Pull-Ring

## Sizing

Height	Width
23.5"	38"

**NOTE:** The 1-piece panel is required for installation (the face mounts to the panel).




## Installation

1. Lay the face upside down on a non-scratching flat surface. Align the sides with the top of the face and secure with the 4 nuts. Use a 3/8" wrench to tighten the nuts.




**Figure 3: Nut location**

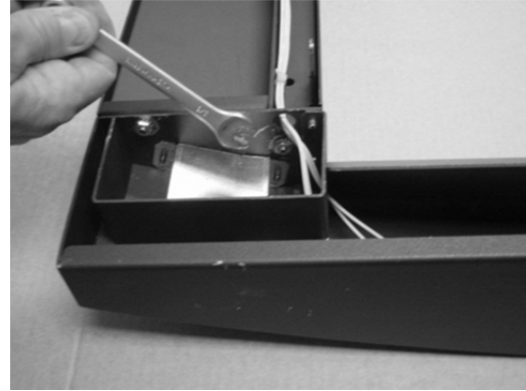

**Figure 4: Tightening a nut**

2. Secure the wires to the face using lock-ties. Make sure the wires are secured at all 3 locations. Tighten the lock-ties and cut off excess tie. Do not over-tighten.

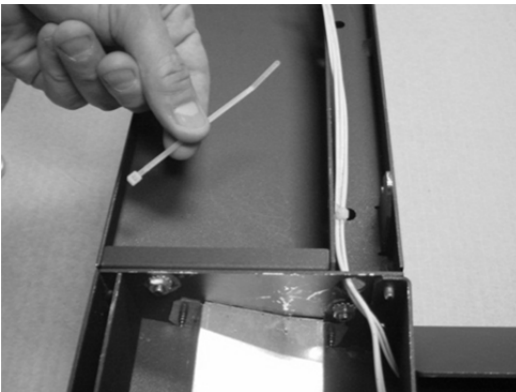


**Figure 5: Lock-tie**



**Figure 6: Securing the lock-tie**



**Figure 7: Wires secured with lock-tie**

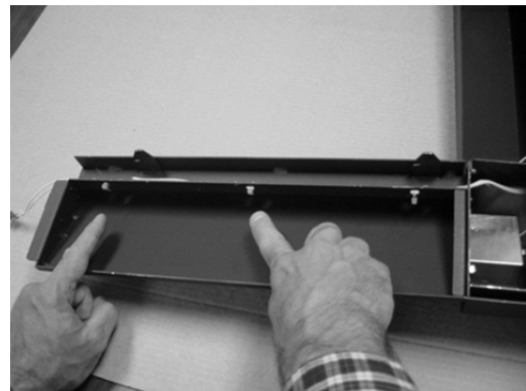

**Figure 8: Wires routed**



# Flush Wood Plus Cypress Face Installation

(95600565)

3. Remove the bypass rod from the fork in the insert, and set aside for later use.
4. Attach the face to the insert by inserting the tabs located on the face into the vertical slots on the surround panel.



Figure 9: Attaching the face

5. On the left side, connect the Molex connector from the face to the Molex connector on the insert.

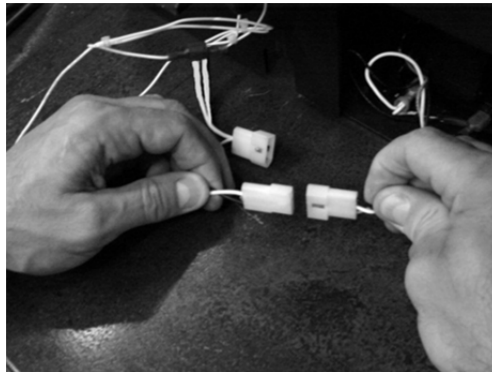


Figure 10: Connecting the Molex connectors

6. Tuck excess wires into the cavity near the blower. Make sure they do not contact hot (the bottom of the firebox) or moving components.



Figure 11: Tuck excess wires



# Flush Wood Plus Cypress Face Installation

(95600565)

7. Attach one of the extension rods from this kit to the back of the existing air control rod assembly.

**NOTE:** If the power cord is routed onto the hearth, make sure to remove the tab on the face, as shown below (either side may be used).

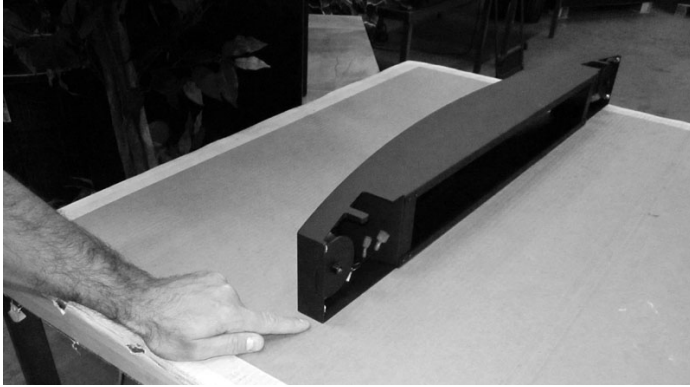


Figure 12: Cut-away in face

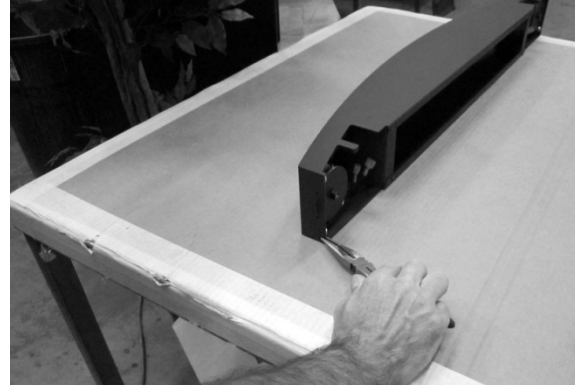


Figure 13: Bending the tab on the face

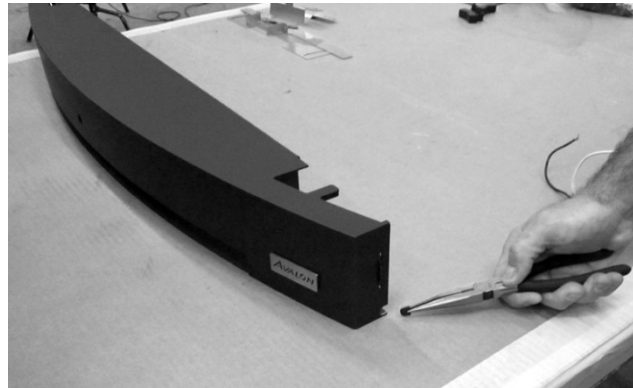


Figure 14: Removing the cut-away covering

8. Place the bottom section of the face near the insert. Connect the wires at the bottom left and right sides of the face.

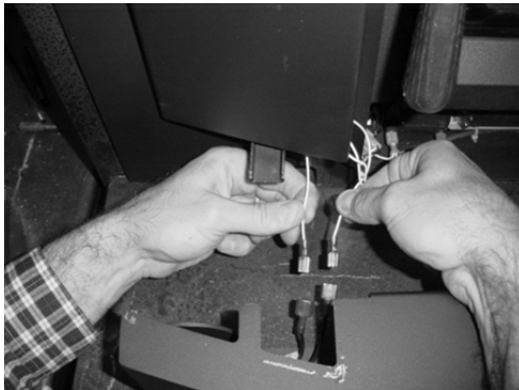


Figure 15: Connecting the bottom left wires



Figure 16: Connecting the bottom right wires



# Flush Wood Plus Cypress Face Installation

(95600565)

9. Attach the lower face to the fireplace by inserting the tabs on the bottom into the slots provided in the insert. The face should be aligned flush with the insert.



Figure 17: Attaching the lower face



Figure 18: Face aligned flush with the insert

**NOTE:** If the power cord is routed on the hearth, make sure it is routed through the cut-away in the bottom of the face.

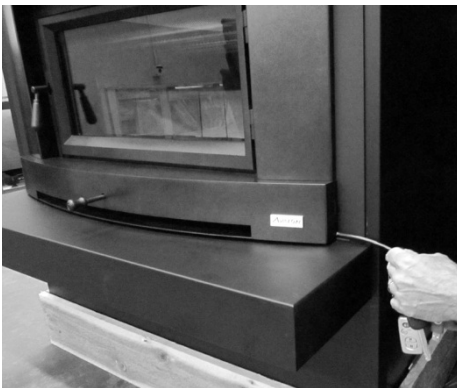


Figure 19: Routing the power cord



Figure 20: Routing the power cord

10. Attach the air control rod extension to the air control rod on the unit.



Figure 21: Attaching the air control rod



Figure 22: Tightening the air control rod



# Flush Wood Plus Cypress Face Installation

(95600565)

11. Attach the extension rod shipped with this kit to the bypass rod that was removed in Step 3, and attach to the bypass yoke.



Figure 23: Extension rod



Figure 24: Attaching the extension rod


**HINT:** While installing the bypass extension, reach into the firebox and hold the bypass plate and yoke. See the manual for a detailed view.

## Light Bulb Replacement



Take care not to touch the new bulb with your fingers – use foam packing or paper towel to hold the bulb. Note the location of the light bulb under the top left corner of the face.

1. Remove the two screws securing the cover plate and screen that conceal the light. Set the screws, plate, and screen aside.

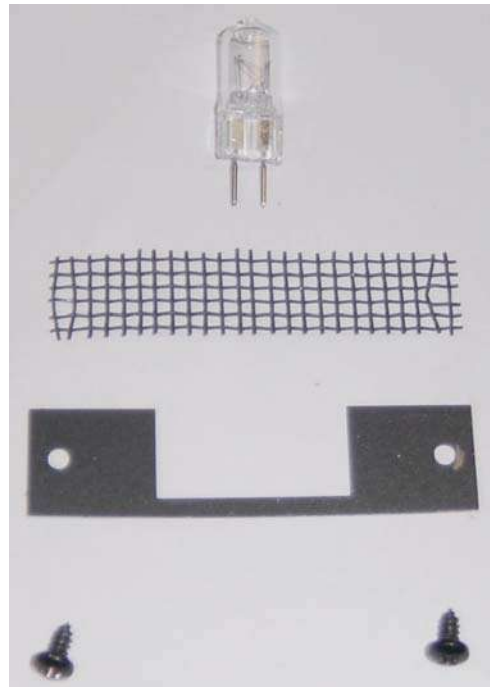



# Flush Wood Plus Cypress Face Installation

(95600565)

2. Remove the spent bulb. Wrap the new bulb in foam packing or paper towel and insert it into the socket.



3. Before replacing the cover plate and screen, insert the screws through the plate into the screen (see picture below). This makes it easier to attach the screen and cover plate.



4. Attach the screen and cover plate using the screws removed in step 1.

